


ALPHA PLAN

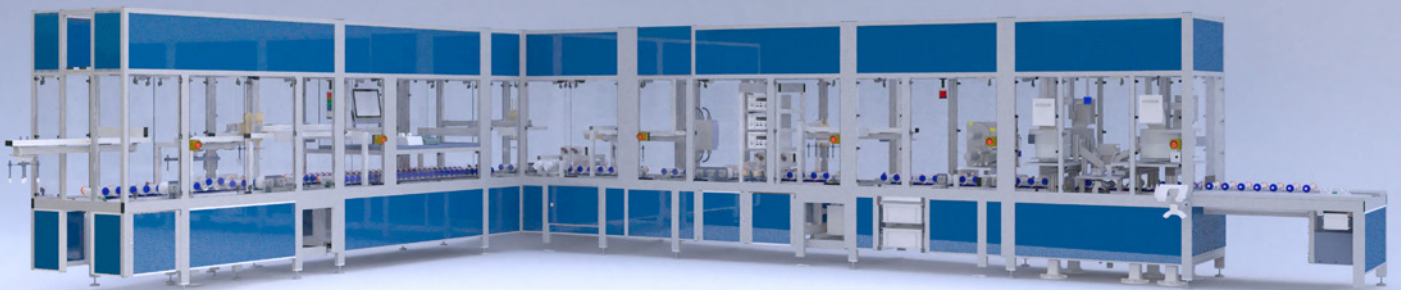

Product brochure
alphaFCHECK[®]

Final-Check

In the alphaFCHECK® the dry filter modules are finally assembled and subjected to final tests. A scale first checks all products for residual moisture by comparing their weights with the dry weights. In combination with an alphaFLOW® PRO, the end caps are then installed.

Their bolting to a defined torque secures the products against leakage. For maximum safety, the housing is additionally tested once again. Leaks are reliably detected here and the faulty specimens are sorted out. Finally, the end caps are fitted and the product label is affixed. The product is now ready for final packaging (additional option sterile packaging: see under Specials).

	BASIC	PRO
Automatic weighing of the products	✓	✓
I-Test	✓	✓
BDE system	✓	✓
Automatic blood cap assembly	✗	✓
Automatic end cap assembly	✗	✓
Automatic label printing	✗	✓

Technology processes

